



NXTECH

Technical Instructions	Printers	OEM Info	Tools	1
------------------------	----------	----------	-------	---

**CORPORATE
LOS ANGELES, USA**

US 1 800 394.9900
Int'l +1 818 837.8100
FAX 1 800 394.9910
Int'l +1 818 838.7047

ATLANTA, USA

US 1 877 676.4223
Int'l +1 770 516.9488
FAX 1 877 337.7976
Int'l +1 770 516.7794

DALLAS, USA

US 1 877 499.4989
Int'l +1 972 840.4989
FAX 1 877 774.1750
Int'l +1 972 840.1750

MIAMI, USA

US 1 800 595.429
Int'l +1 305 594.3396
FAX 1 800 522.8640
Int'l +1 305 594.3309

NEW YORK, USA

US 1 800 431.7884
Int'l +1 631 345.0121
FAX 1 800 431.8812
Int'l +1 631 345.0690

SANFORD, USA

US 1 800 786.9049
Int'l +1 919 775.4584
FAX 1 800 786.9049
Int'l +1 919 775.4584

TORONTO, CAN

CAN 1 877 848.0818
Int'l +1 905 712.9501
FAX 1 877 772.6773
Int'l +1 905 712.9502

BUENOS AIRES, ARG

ARG 0810 444.2656
Int'l +011 4583.5900
FAX +011 4584.3100

MELBOURNE, AUS

AUS 1 800 003.100
Int'l +62 03 9561.8102
FAX 1 800 004.302
Int'l +62 03 9561-7751

SYDNEY, AUS

AUS 1 800 003.100
Int'l +62 02 9648.2630
FAX 1800 004.302
Int'l +62 02 9548.2635

MONTEVIDEO, URY

URY 02 902.7206
Int'l +5982 900.8358
FAX +5982 908.3816

JOHANNESBURG, S.A.

S.A. +27 11 974.6155
FAX +27 11 974.3593

Canon LBP-NX, NX600, P170
DEC Print-Server 17,17/600
HP G2010A Laserjet 4Si
4Si/MX
HP LaserJet IISi, IISi Mac,
IISi/PS
HP Laserjet 4Si, 4Si/MX
Interface System 7817
QMS PS 1700, 1725
Tandem 5577
Wang LDP-17

Part Number: 92291A
Gram Load: 500 grams
Yield @ 5%: 8000 pgs
Pages/Min.: 17ppm
Resolution: 300/600 dpi

Small Flat Blade Screwdriver
#1 Phillips Screwdriver
Needle Nose Pliers
Pin Pulling Tool
Soft Lint-Free Cloth
Cotton Swabs
Mag Roller Cleaner
Conductive Grease
Anhydrous Isopropyl Alcohol
Vacuum or Compressed Air
Padding Powder

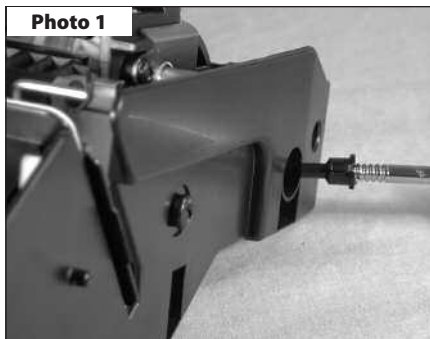


Photo 1

Step 1

Place the cartridge top side down on the table with the small drum gear facing you. Use a pin pulling tool to remove the plastic locking pin.

(See Photo 1)

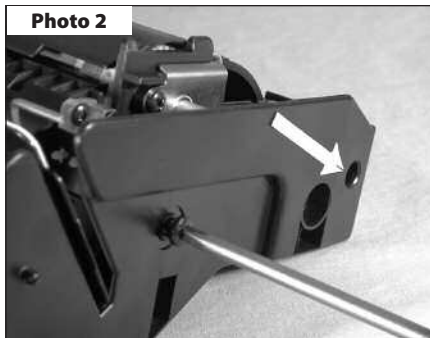


Photo 2

Step 2

With a #1 Phillips screwdriver, remove the large screw and its spacer, then the small screw indicated with an arrow.

(See Photo 2)

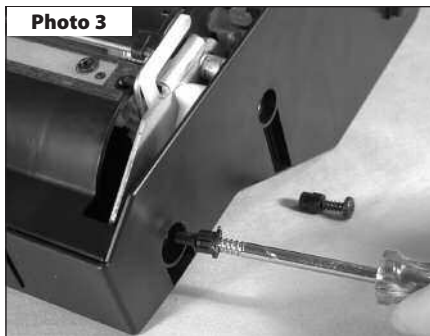


Photo 3

Step 3

Rotate the cartridge end-for-end and remove the large screw, spacer and plastic locking pin from that end.

(See Photo 3)

