

Rite Seal Insertion Seal Installation

AX/1100, LX, PX/VX, N32, BX, HP1150/1200/1300, HP1010/1012, ML5000 (P8E), PB9900/UF550, UF560/770/880, PAN585

Installation Instructions

Photo 1

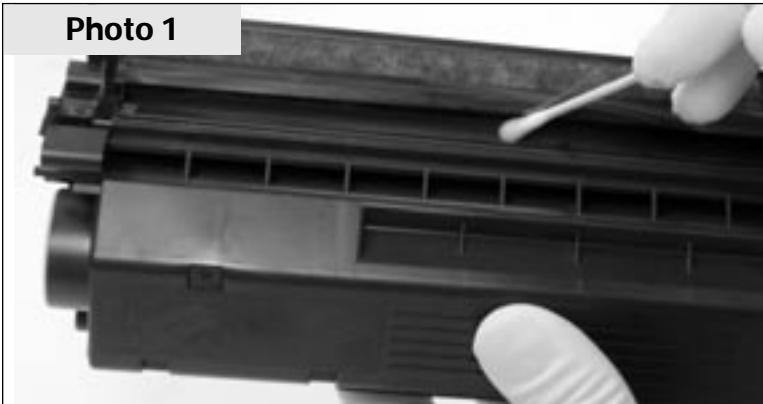


Photo 2

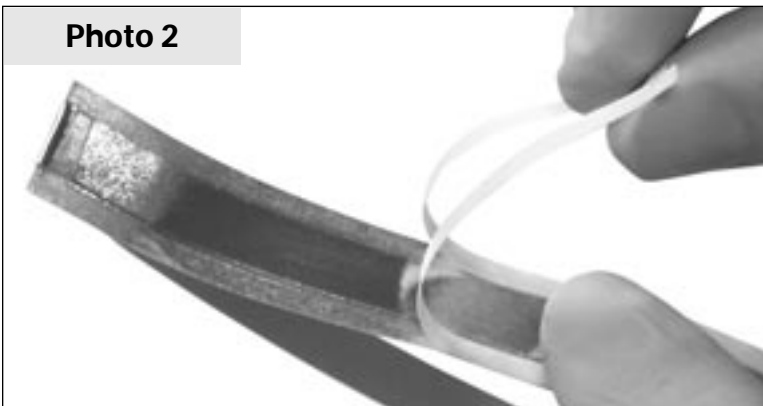


Photo 3



Photo 4



SILVER RITSEALS™ are premium seals with a revolutionary double ribbon reinforced design to guarantee against leakage. SILVER RITSEALS™ are designed to be completely clean when seal is removed. They leave no toner residue and are durable, tear straight every time and are simple to install. Please follow these directions for simple and correct installation of your SILVER RITSEALS™.

Empty all toner from the hopper and remove the mag roller assembly. Remove seal exit port plug if present. Use compressed air or a vacuum to remove any remaining toner from the hopper.

Remove all traces of the prior seal around the hopper opening. Be sure that the area is free of any toner residue and seal adhesives. Clean the hopper opening using a Q-Tip and isopropyl alcohol (Photo 1). (*Tip: The seal insertion tool can aid in the removal of residues.*)

PLEASE SEE A NOTE BELOW FOR AX, HP1150/1200/1300 SEALS.

Unthread the tail of the seal. Remove protective backing to expose adhesive (Photo 2). It may be easier to pinch release liner in the center of the seal and lift to remove.

Place the seal, adhesive-side DOWN onto the white release tape extension of the installation tool (Photo 3).

Place exposed adhesive leading edge of seal into hopper opening over the INSIDE seal-ledge. Gently rest the profile of the tool into the opening (Photo 4).

Rite Seal Insertion Seal Installation

AX/1100, LX, PX/VX, N32, BX, HP1150/1200/1300, HP1010/1012, ML5000 (P8E), PB9900/UF550, UF560/770/880, PAN585

Installation Instructions

Photo 5



Using the pointed end of the stylus, starting from center to the corners, apply pressure along the entire length of the innermost edge of the seal (*Photo 5*). Remove the installation tool by angling it up and then away from the hopper.

Photo 6



Use the special seal stylus to secure the seal into place by pressing along the entire seal perimeter (*Photo 6*). Do not press in center of seal – it may cause seal to pull away from walls. Pay special attention to the area at the hopper end where the two plastic reinforcements are located. Adhesive DOES NOT go all the way to the end of the seal. Be sure to firmly press down a millimeter or two inside the edge of the seal.

PLEASE SEE A NOTE FOR N32 SEAL

Note for AX, HP1150/1200/1300:

Remove two original doctor blade sealing end foams from the cartridge (*Photo 7*).

Continue installation as above (*Step 3*)

When seal is completely installed, continue with Final Step.

Photo 7




FINAL STEP: Using tweezers, install new doctor blade sealing end foams (Both left and right hopper end foams included) – curved side up – at the opening ends. There are left side and right side foams provided on easy to use paper backed sets.

Note for N32:

Remove paper backing from special cleaning felt (included) to expose adhesive. Install the felt on seal exit port plug as shown on *Photo 8*. Reinsert the seal exit port plug into the hopper above the tail of the seal.

Please note: If the cartridge is to be reused another cycle, be sure to remove all residue of the old SILVER RITESEAL™ prior to installing a new seal.

Photo 8

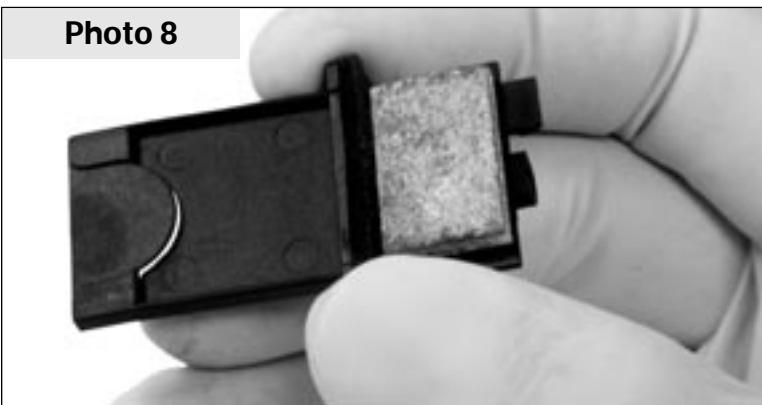

Need help with a particular remanufacturing problem?

Technical Resource Center

Call from 8am - 5pm (Pacific Standard Time)

USA 800.394.9900

Int'l +1 818 837.8100

Need trustworthy, detailed Technical Instructions for another engine?

Visit: www.futuregraphicsllc.com